




## **LG Motorsports Rear HD Tie Rod and Bump Steer Kit Installation Instructions (Driver Side)**

Tools needed: Wrench Set, 5/16" drill bit and drill

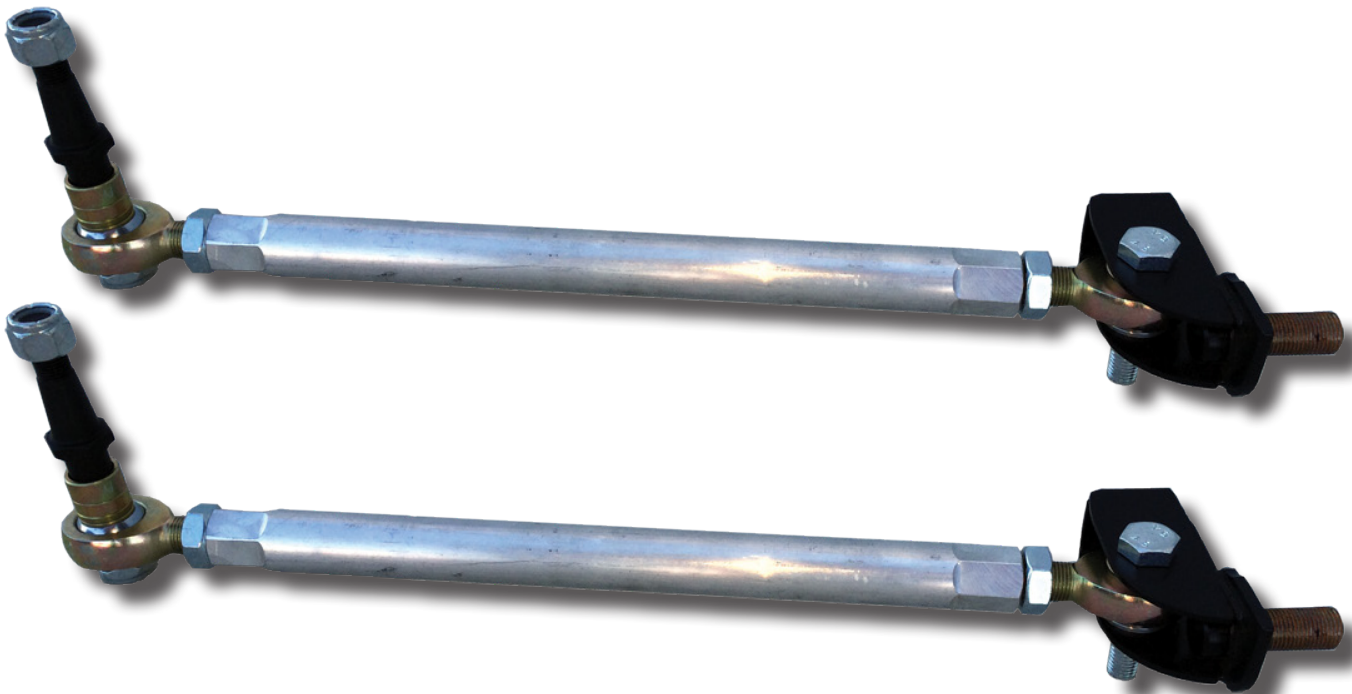


LG Motorsports HD rear tie rod kit is designed to offer a full range of travel as a bump steer kit and beef up the tie rod where the factory left off. Angle adjustments can be made at the inside and outside of the rod and use Left hand / Right hand ends for quick and easy toe adjustment changes. The inside mount is offset to allow more clearance for aftermarket coil overs and other suspension changes. Works with OEM and LG Billet spindles.

**Remove factory tie rod. Place LG tie rod bracket on subframe and tighten inward-facing bolt.**



**Mark drill hole with marker.**  
**Drill with 5/16" drill bit**

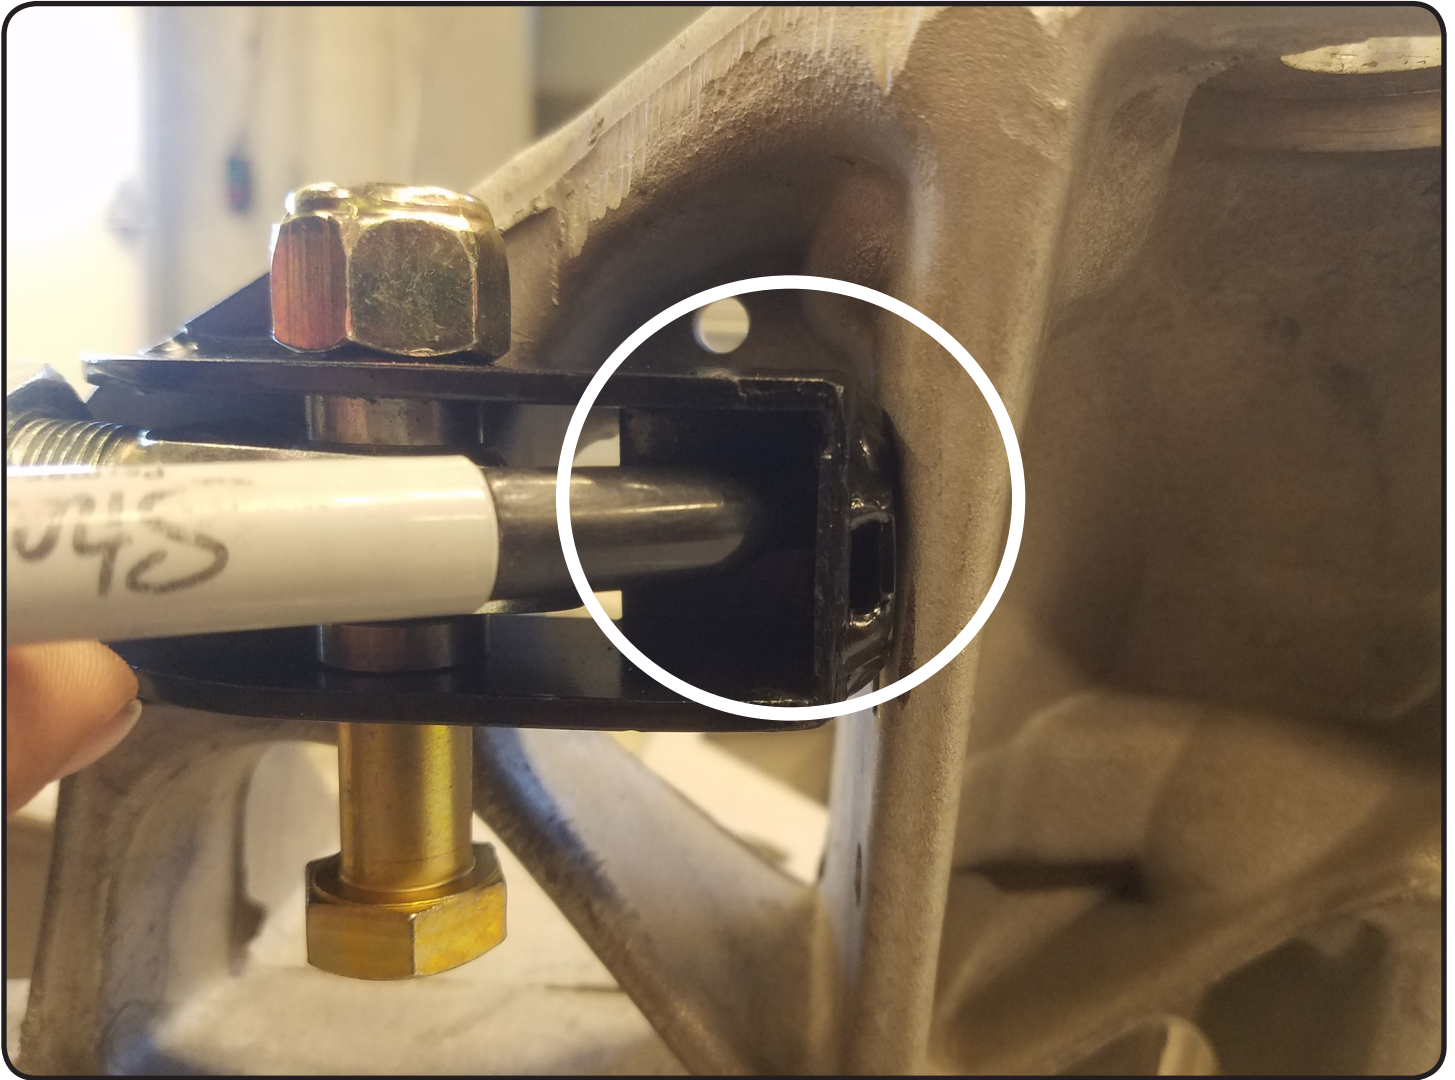



**Remove tie rod bracket and drill at the mark.**



**Install tie rod bracket and tighten both bolts to the subframe. Reinstall pin to spindle.**

**Repeat process on passenger side.**

**Align car before driving.**

